


AIR1-AAHF XH / AIR1-AAHF RH



Dimensions AIR1-AAHF XH / AIR1-AAHF RH

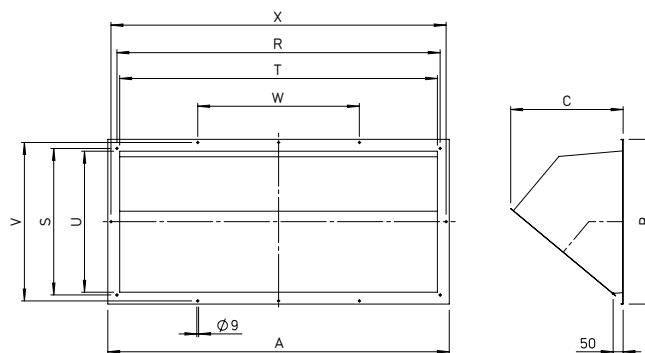

Dimensions in mm

■ Discharge hood exhaust air

Discharge hood exhaust air for external installation. Includes protection guard. Mounting via flange connection to the unit connector. Surface with weather-resistant coating.

■ Dimensions

| Type | Ref. no. | A | B | C | R | S | T | U | V | W | X |
|--------------------------------|----------|------|-----|-----|------|-----|------|-----|-----|-----|------|
| AIR1-AAHF XH 1500/RH 1500 | 06643 | 410 | 370 | 338 | 378 | 338 | 350 | 310 | – | – | – |
| AIR1-AAHF XH 2500/RH 2000 | 06646 | 530 | 370 | 338 | 498 | 338 | 470 | 310 | – | – | – |
| AIR1-AAHF XH 3500-4500/RH 3000 | 06647 | 640 | 470 | 375 | 608 | 438 | 580 | 410 | – | – | – |
| AIR1-AAHF XH 5500/RH 5000-6000 | 06648 | 915 | 530 | 375 | 883 | 438 | 580 | 410 | 498 | – | – |
| AIR1-AAHF XH 7000/RH 8000 | 06841 | 1115 | 530 | 375 | 1083 | 438 | 1055 | 410 | 498 | 361 | – |
| AIR1-AAHF XH 8500/RH 9500 | 06864 | 1260 | 530 | 375 | 1228 | 438 | 1200 | 410 | 498 | 409 | – |
| AIR1-AAHF RH 12000 | 06865 | 1595 | 630 | 415 | 1503 | 538 | 1475 | 510 | 598 | 501 | 1563 |
| AIR1-AAHF RH 15000 | 06866 | 1720 | 830 | 566 | 1628 | 738 | 1600 | 710 | 798 | 814 | 1688 |