



■ Electric preheating internal

For heating the outside air at very low outdoor temperatures. For installation in the ventilation unit. Power supply and connection to the control system of the air handling unit through pre-assembled plug-in contacts. Stepless regulated.

Detailed calculations / technical information: www.AIR1Select.com

■ Technical data						
Туре	Ref. no.	Heating capacity	Current consumption	Weight		
AIR1-EVH XHP 750	40549	2.7 kW	11.7 A	2.5 kg		
AIR1-EVH XHP 1000-2,5	40572	2.5 kW	10.8 A	7.0 kg		
AIR1-EVH XHP 1000-3,6	40560	3.6 kW	5.2 / 5.2 / 5.2 A	7.0 kg		
AIR1-EVH XHP 1500	40571	3.6 kW	5.2 / 5.2 / 5.2 A	8.0 kg		
AIR1-EVH XHP 2500	40584	9.0 kW	13 / 13 / 13 A	10.0 kg		



■ Electrical auxiliary heater internal

For installation in the ventilation unit. Provides demand-oriented temperature control of supply air. Mains power supply and connection to the ventilation unit control system through pre-wired plug contacts. Variable controls.

Detailed calculations / technical information: www.AIR1Select.com

■ Technical data						
Туре	Ref. no.	Heating capacity	Current consumption	Weight		
AIR1-ENH XHP 750	40550	2.7 kW	11.7 A	2.5 kg		
AIR1-ENH XHP 1000	40561	3.6 kW	5.2 / 5.2 / 5.2 A	7.0 kg		
AIR1-ENH XHP 1500	40573	5.4 kW	7.8 / 7.8 / 7.8 A	8.0 kg		
AIR1-ENH XHP 2500	40585	9.0 kW	13 / 13 / 13 A	10.0 kg		
AIR1-ENH XH 3500	03592	9.6 kW	13.9 / 13.9 / 13.9 A	12.5 kg		
AIR1-ENH XH 4500	03593	12.9 kW	18.6 / 18.6 / 18.6 A	15.0 kg		
AIR1-ENH XH 5500	03595	17.7 kW	25.5 / 25.5 / 25.5 A	17.0 kg		
AIR1-ENH XH 7000	03603	21.0 kW	30.3 / 30.3 / 30.3 A	19.0 kg		
AIR1-ENH XH 8500	03604	22.0 kW	31.8 / 31.8 / 31.8 A	20.0 kg		