

**ELF-AIR1 XH/XHP**



■ **Spare air filter**

Helios AIR1 units are supplied with the filter classes ePM1 55%/F7 (outside air) and ePM10 50%/M5 (extract air) as standard. Depending on the unit size, the air filter consists of multiple (separate) air filter inserts. This is taken into account when ordering the spare air filter.

In case of increased air quality requirements, other filter classes are available for the outside air and extract air (see table below). All air filters are pressure-loss-optimised cassette filters with large filter surfaces.

■ **Technical data**

	Type	Ref. no.	Number of air filter inserts included	Filter class
Pre-filter outside air	ELF-AIR1 XHP 750/ePM10 50%/48	40617	1	ISO ePM <sub>10</sub> 50% (M5)
	ELF-AIR1 XHP 1000/ePM10 50%/48	40618	2	ISO ePM <sub>10</sub> 50% (M5)
	ELF-AIR1 XHP 1500/ePM10 50%/48	40619	2	ISO ePM <sub>10</sub> 50% (M5)
	ELF-AIR1 XHP 2500/ePM10 50%/48	40620	2	ISO ePM <sub>10</sub> 50% (M5)
	ELF-AIR1 XH 3500/ePM10 50%/48	02180	2	ISO ePM <sub>10</sub> 50% (M5)
	ELF-AIR1 XH 4500/ePM10 50%/48	02182	4	ISO ePM <sub>10</sub> 50% (M5)
	ELF-AIR1 XH 5500/ePM10 50%/48	02186	4	ISO ePM <sub>10</sub> 50% (M5)
	ELF-AIR1 XH 7000/ePM10 50%/48	02187	6	ISO ePM <sub>10</sub> 50% (M5)
Extract air filter	ELF-AIR1 XHP 750/ePM10 50%/96	40595	1	ISO ePM <sub>10</sub> 50% (M5)
	ELF-AIR1 XHP 1000/ePM10 50%/96	40598	2	ISO ePM <sub>10</sub> 50% (M5)
	ELF-AIR1 XHP 1500/ePM10 50%/96	40601	2	ISO ePM <sub>10</sub> 50% (M5)
	ELF-AIR1 XHP 2500/ePM10 50%/96	40605	2	ISO ePM <sub>10</sub> 50% (M5)
	ELF-AIR1 XH 3500/ePM10 50%/96	02206	2	ISO ePM <sub>10</sub> 50% (M5)
	ELF-AIR1 XH 4500/ePM10 50%/96	02207	4	ISO ePM <sub>10</sub> 50% (M5)
	ELF-AIR1 XH 5500/ePM10 50%/96	02208	4	ISO ePM <sub>10</sub> 50% (M5)
	ELF-AIR1 XH 7000/ePM10 50%/96	02209	6	ISO ePM <sub>10</sub> 50% (M5)
Outside or extract air filter	ELF-AIR1 XHP 750/ePM1 55%/96	40596	1	ISO ePM <sub>1</sub> 55% (F7)
	ELF-AIR1 XHP 1000/ePM1 55%/96	40599	2	ISO ePM <sub>1</sub> 55% (F7)
	ELF-AIR1 XHP 1500/ePM1 55%/96	40602	2	ISO ePM <sub>1</sub> 55% (F7)
	ELF-AIR1 XHP 2500/ePM1 55%/96	40606	2	ISO ePM <sub>1</sub> 55% (F7)
	ELF-AIR1 XH 3500/ePM1 55%/96	02230	2	ISO ePM <sub>1</sub> 55% (F7)
	ELF-AIR1 XH 4500/ePM1 55%/96	02231	4	ISO ePM <sub>1</sub> 55% (F7)
	ELF-AIR1 XH 5500/ePM1 55%/96	02233	4	ISO ePM <sub>1</sub> 55% (F7)
	ELF-AIR1 XH 7000/ePM1 55%/96	02234	6	ISO ePM <sub>1</sub> 55% (F7)
Outside air filter	ELF-AIR1 XHP 750/ePM1 80%/96	40597	1	ISO ePM <sub>1</sub> 80% (F9)
	ELF-AIR1 XHP 1000/ePM1 80%/96	40600	2	ISO ePM <sub>1</sub> 80% (F9)
	ELF-AIR1 XHP 1500/ePM1 80%/96	40603	2	ISO ePM <sub>1</sub> 80% (F9)
	ELF-AIR1 XHP 2500/ePM1 80%/96	40607	2	ISO ePM <sub>1</sub> 80% (F9)
	ELF-AIR1 XH 3500/ePM1 80%/96	02291	2	ISO ePM <sub>1</sub> 80% (F9)
	ELF-AIR1 XH 4500/ePM1 80%/96	02292	4	ISO ePM <sub>1</sub> 80% (F9)
	ELF-AIR1 XH 5500/ePM1 80%/96	02293	4	ISO ePM <sub>1</sub> 80% (F9)
	ELF-AIR1 XH 7000/ePM1 80%/96	02435	6	ISO ePM <sub>1</sub> 80% (F9)
ELF-AIR1 XH 8500/ePM1 80%/96	02334	6	ISO ePM <sub>1</sub> 80% (F9)	