


EC 60/35 NC SS-1167

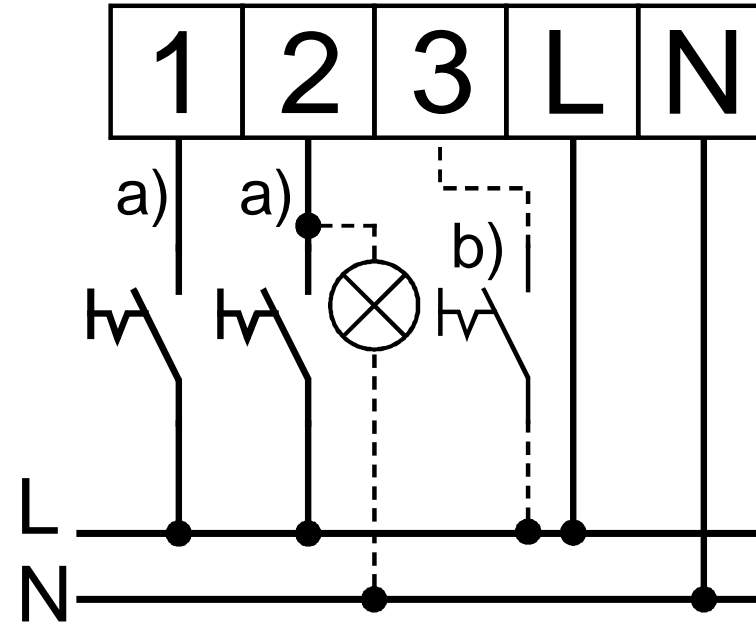

3	
2	60 m ³ /h
1	35 m ³ /h

a) manuell Ein
 b) Automatik deaktivieren

a) ON manually
 b) deactivate automatic

a) Mode manuel forcé
 b) Désactivation du
 mode automatique