


EC 100/35 NC SS-1168

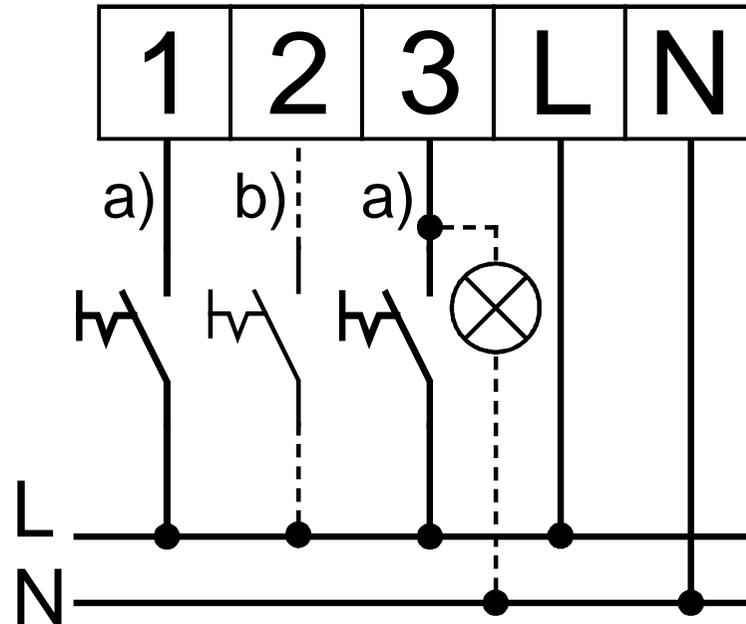

3	100 m ³ /h		
2			
1	35 m ³ /h		

a) manuell Ein
b) Automatik deaktivieren

a) ON manually
b) deactivate automatic

a) Mode manuel forcé
b) Désactivation du
mode automatique