


EC 100/60 NC SS-1169

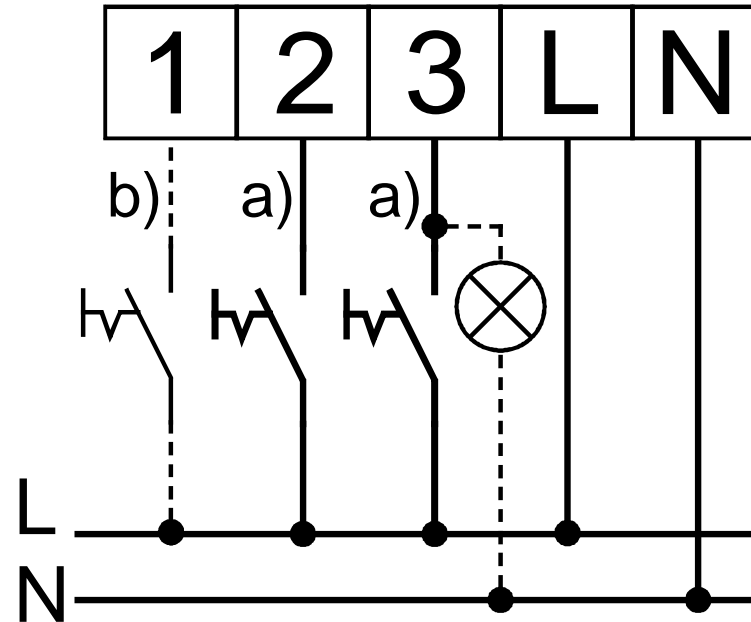

3	100 m ³ /h		
2	60 m ³ /h		
1			

a) manuell Ein
 b) Automatik deaktivieren

a) ON manually
 b) deactivate automatic

a) Mode manuel forcé
 b) Désactivation du mode automatique