
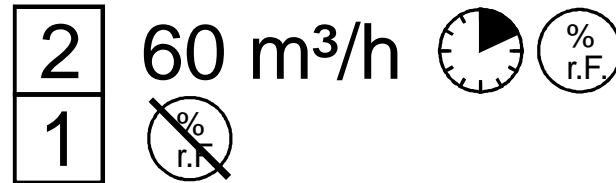


EC 60 F

SS-1171

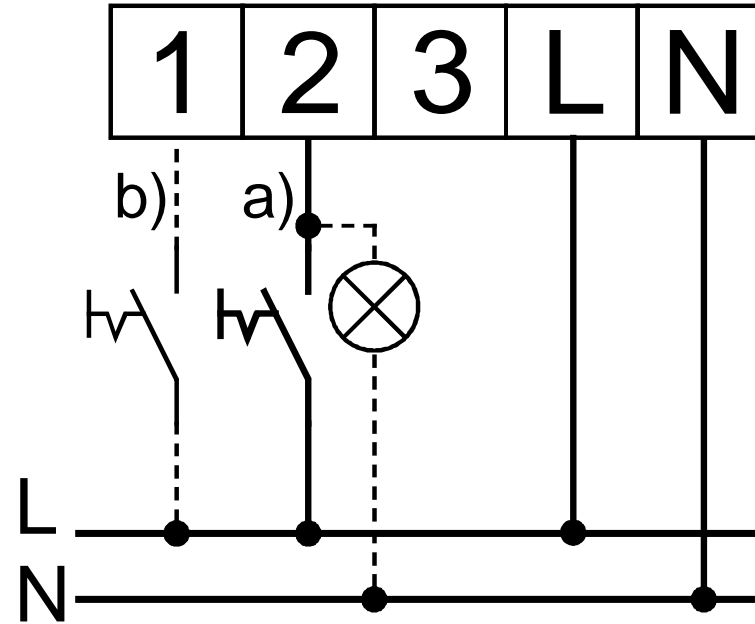

- a) manuell Ein
- b) Automatik deaktivieren

-
- a) ON manually
 - b) deactivate automatic

-
- a) Mode manuel forcé
 - b) Désactivation du mode automatique