


EC 100 F SS-1172

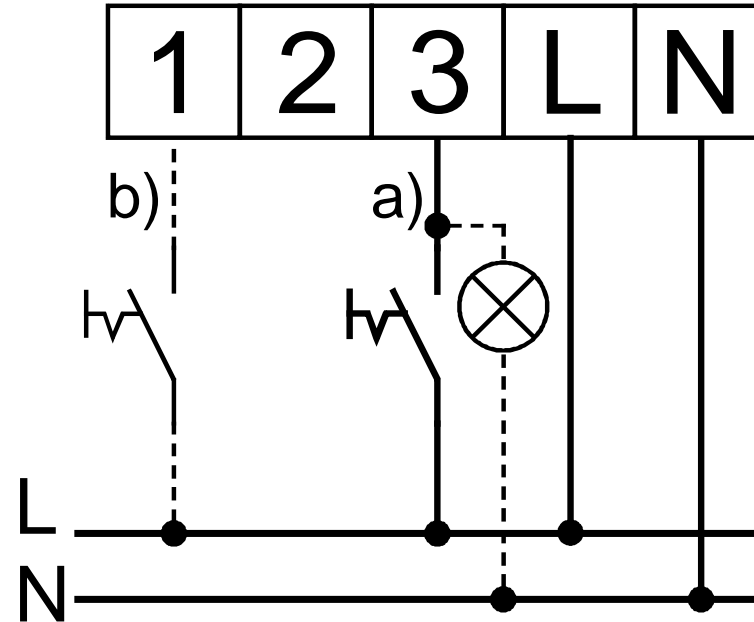

3	100 m ³ /h		
1			

- a) manuell Ein
- b) Automatik deaktivieren

-
- a) ON manually
 - b) deactivate automatic

-
- a) Mode manuel forcé
 - b) Désactivation du mode automatique