






EC 60/35 F SS-1173

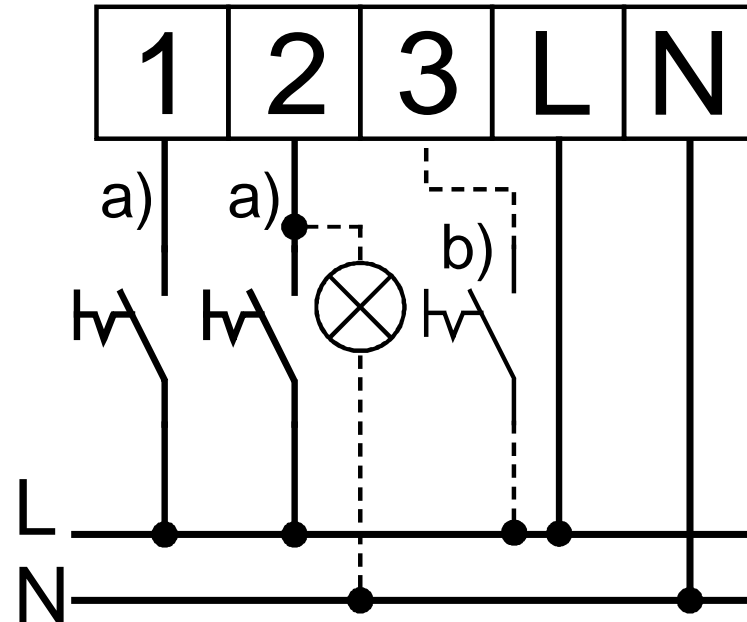

3			
2	60 m <sup>3</sup> /h		
1	35 m <sup>3</sup> /h		

a) manuell Ein  
b) Automatik deaktivieren

a) ON manually  
b) deactivate automatic

a) Mode manuel forcé  
b) Désactivation du  
mode automatique