


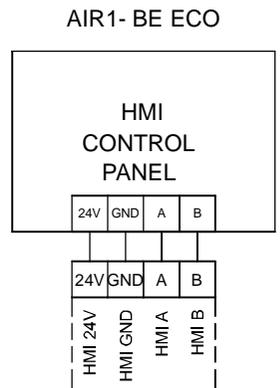
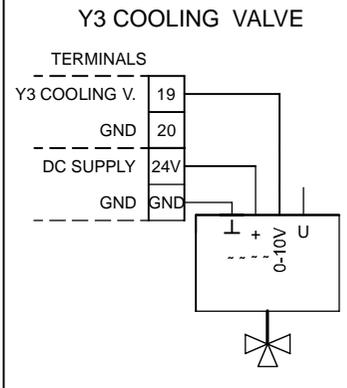
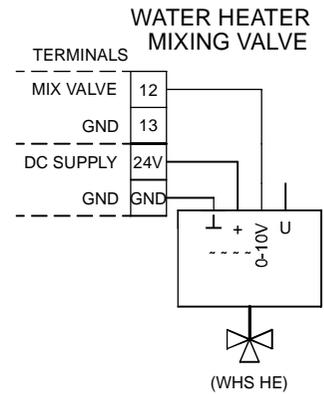


36-37: Luftqualitätssensor 1 oder Temperatur-Sensor (Temperaturausgang AIR1/KWL-FTF 0-10V)  
38-39: Luftqualitätssensor 2  
40-41: Luftqualitätssensor 3

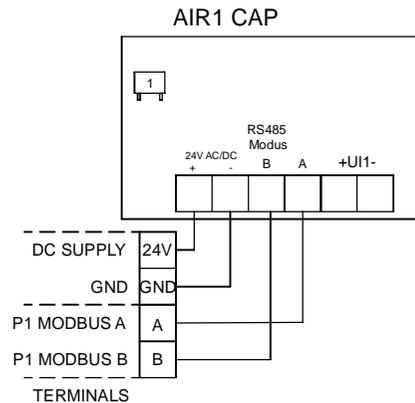


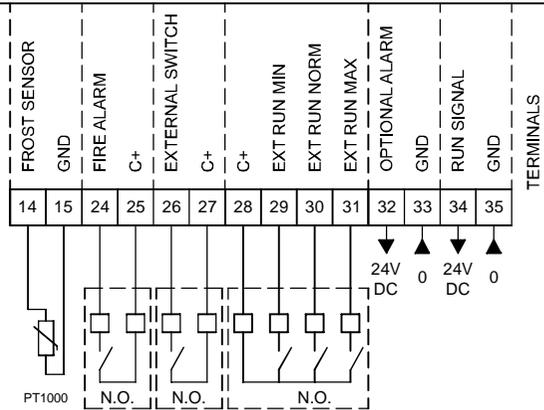


**ELECTRICAL AFTER HEATER**

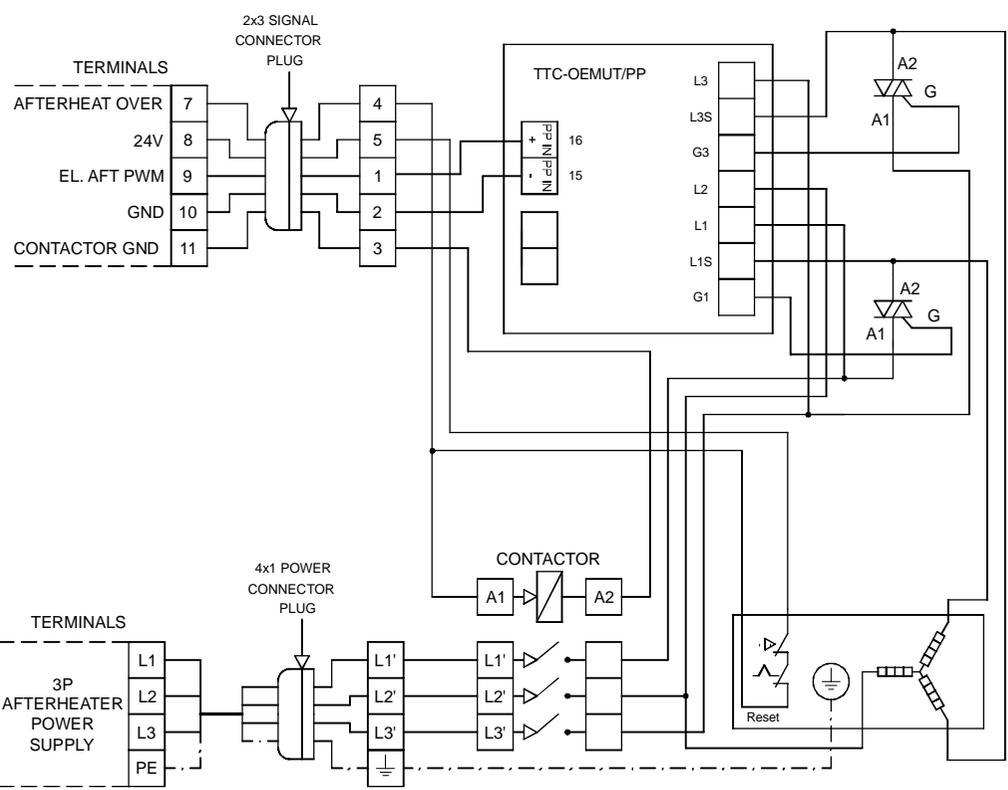


**PUMP WW/CW/DRAINAGE**

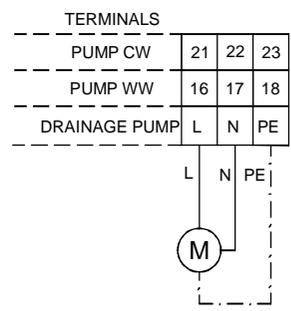


**AIR1-BE TOUCH**

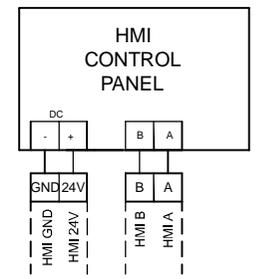


**BACNET & MODBUS**

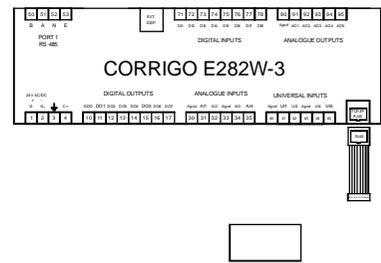

**Air Quality Sensors**

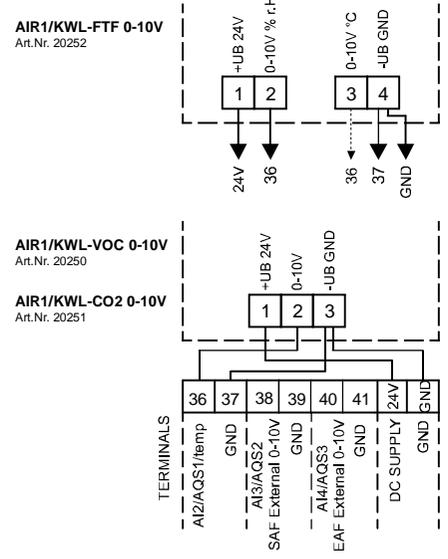

**Air1 CO2 K**

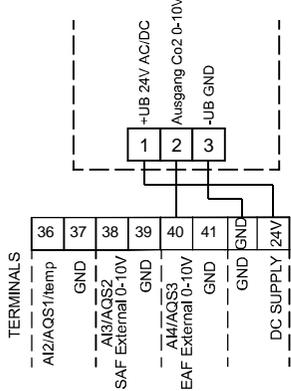

36-37: Air Quality Sensor 1 or temperature sensor (temp output AIR1/KWL-FTF 0-10V)  
38-39: Air Quality Sensor 2  
40-41: Air Quality Sensor 3

**UNIT POWER SUPPLY**

