





42-43: Air Quality Sensor 1 or temperature sensor (temp output AIR1/KWL-FTF 0-10V)

44-45: Air Quality Sensor 2

46-47: Air Quality Sensor 3



