

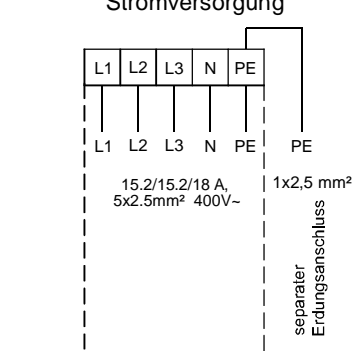
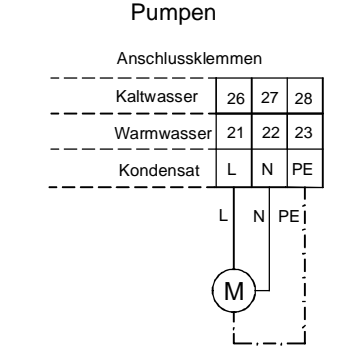
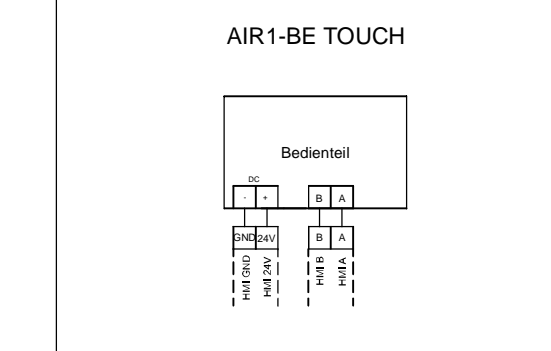
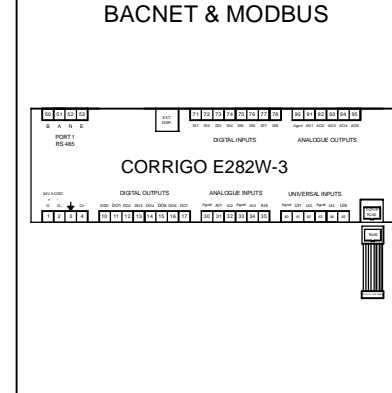
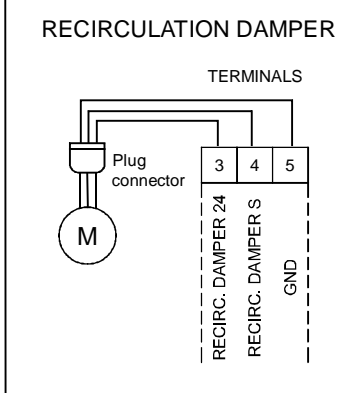
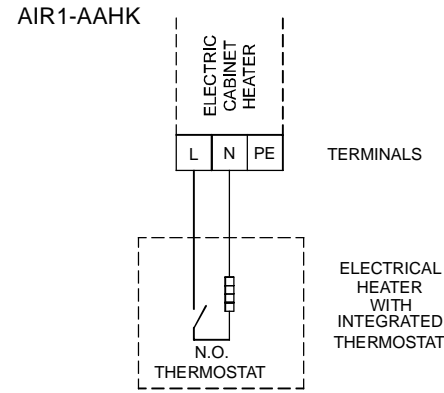
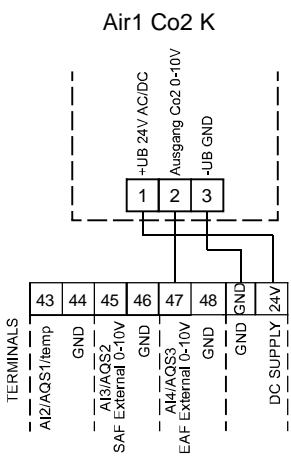
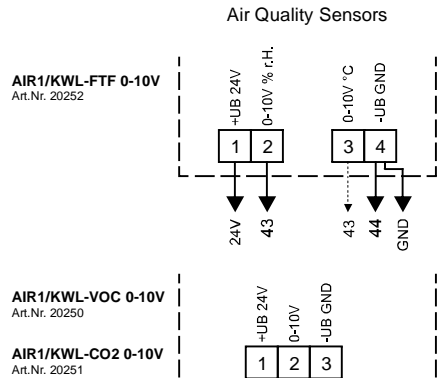
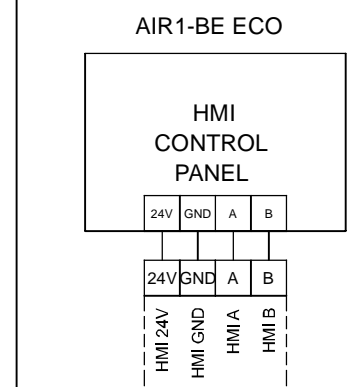
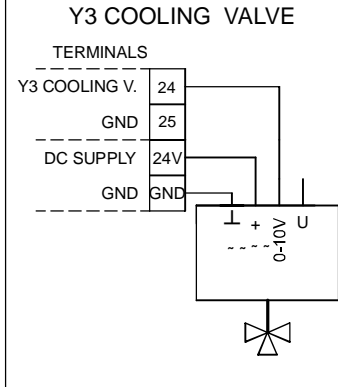
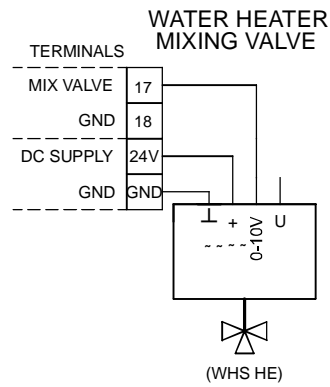


43-44: Luftqualitätssensor 1 oder Temperatur-Sensor (Temperatursignal AIR1/KWL-FTF 0-10V)
 45-46: Luftqualitätssensor 2
 47-48: Luftqualitätssensor 3

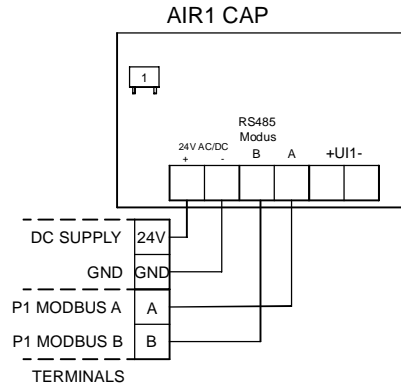

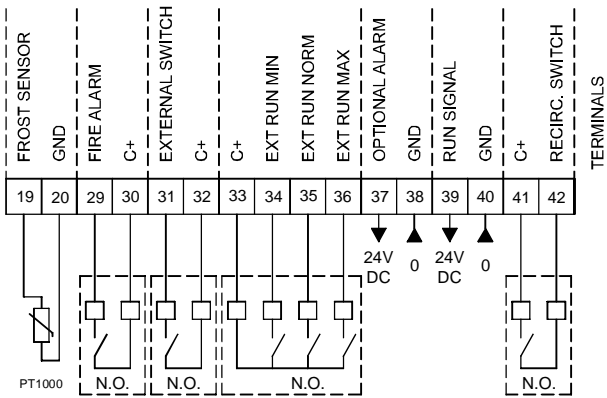


43-44: Air Quality Sensor 1 or temperature sensor (temp output AIR1/KWL-FTF 0-10V)


45-46: Air Quality Sensor 2

47-48: Air Quality Sensor 3


AIR1-BE TOUCH








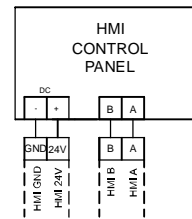


PUMP WW/CW/DRAINAGE

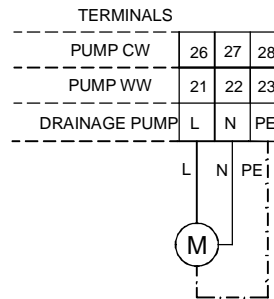

UNIT POWER SUPPLY

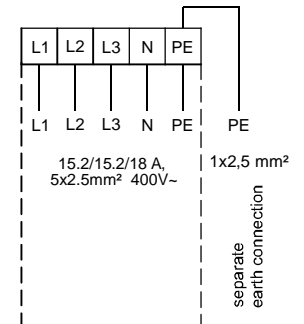

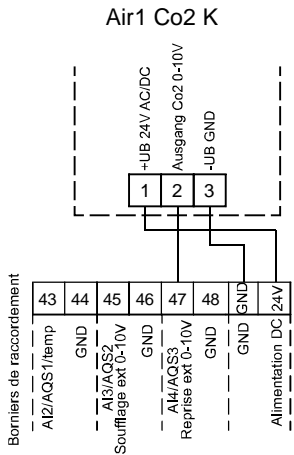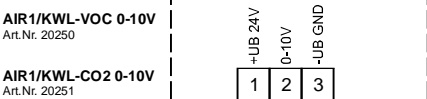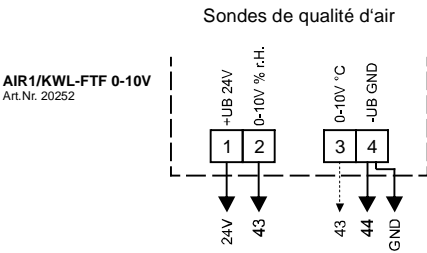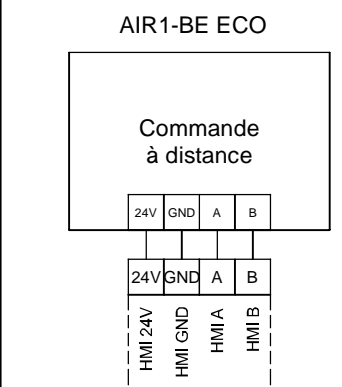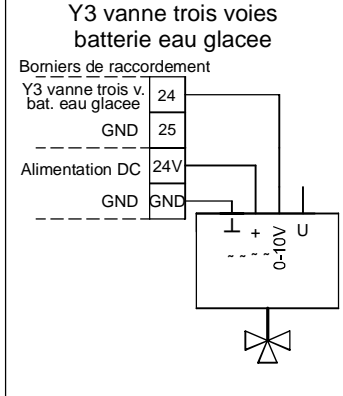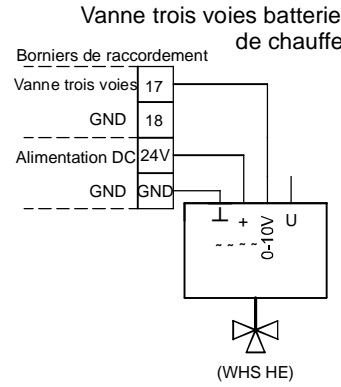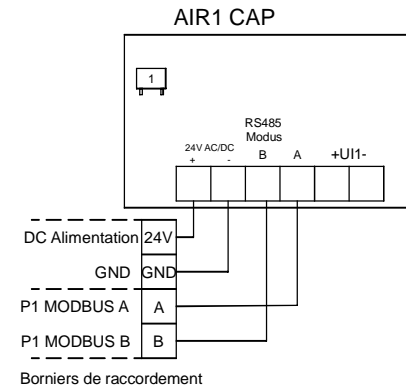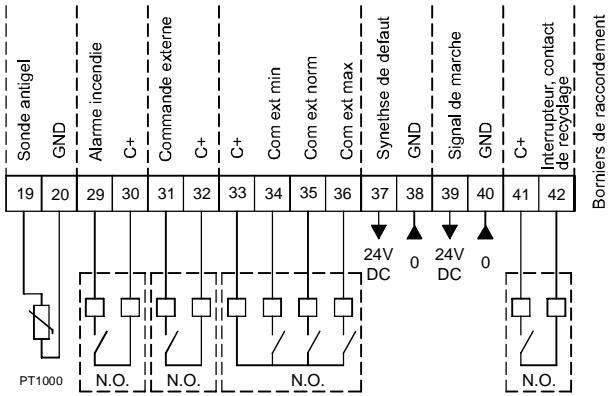 

43-44: Sonde de qualité d'air 1 ou capteur de température (sortie de température AIR1/KWL-FTF 0-10V)
 45-46: Sonde de qualité d'air 2
 47-48: Sonde de qualité d'air 3

