

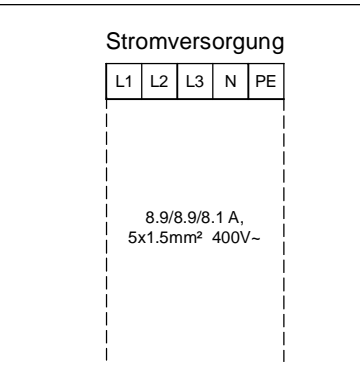
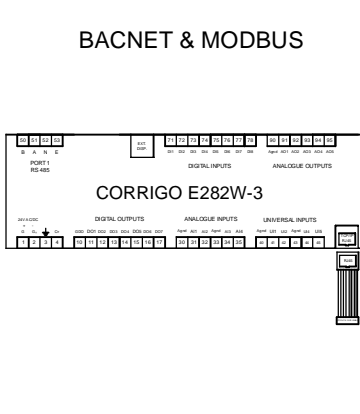
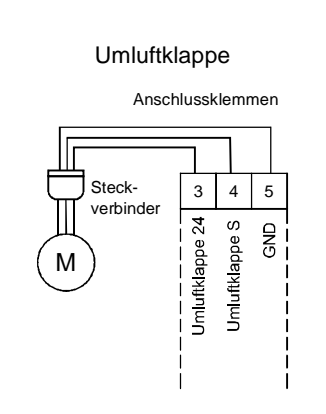
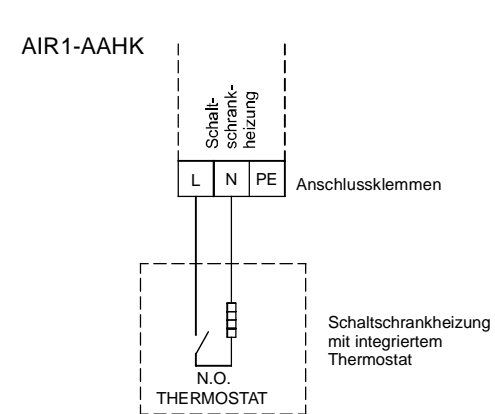
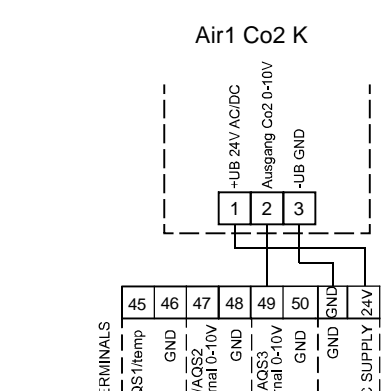
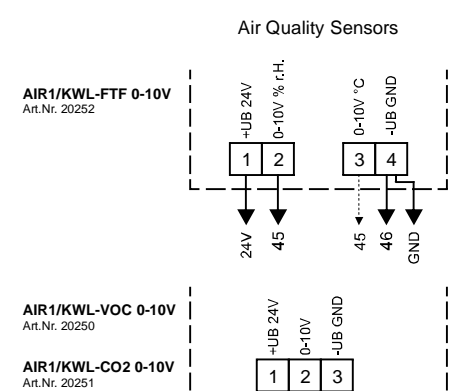
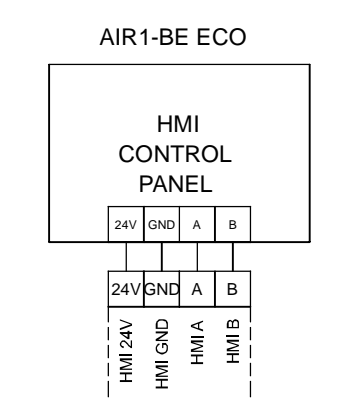
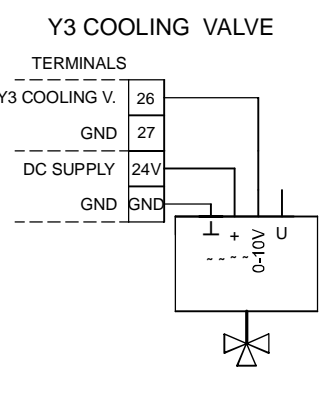
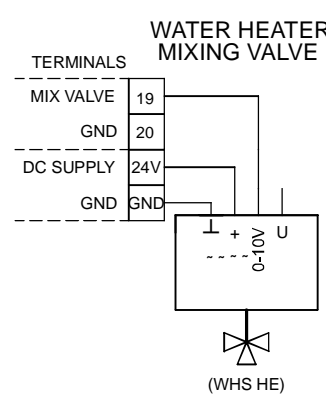


45-46: Luftqualitätssensor 1 oder Temperatur-Sensor (Temperaturausgang AIR1/KWL-FTF 0-10V)  
 47-48: Luftqualitätssensor 2  
 49-50: Luftqualitätssensor 3






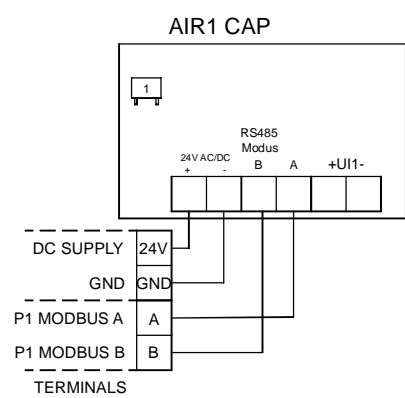








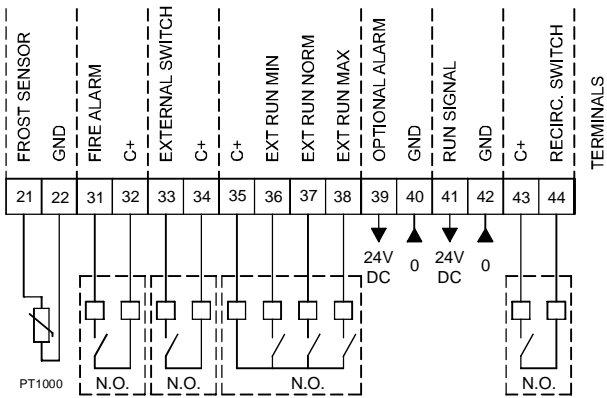


45-46: Air Quality Sensor 1 or temperature sensor (temp output AIR1/KWL-FTF 0-10V)

47-48: Air Quality Sensor 2

49-50: Air Quality Sensor 3

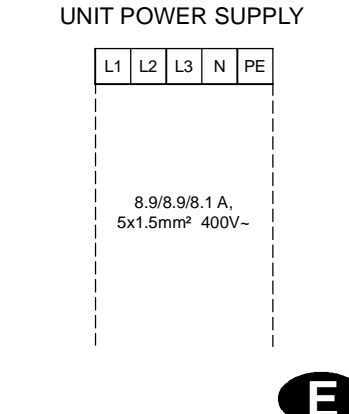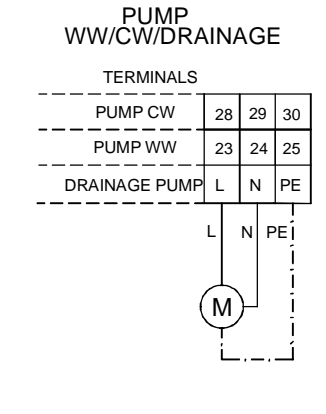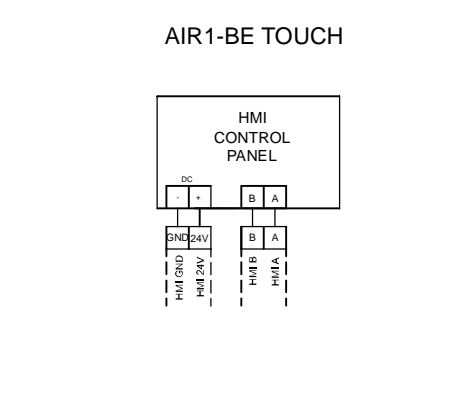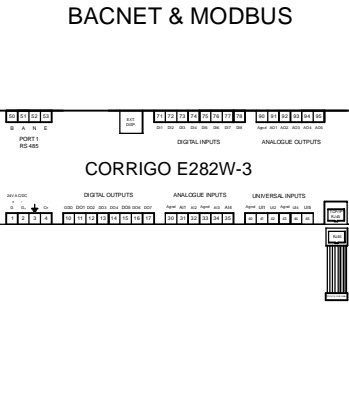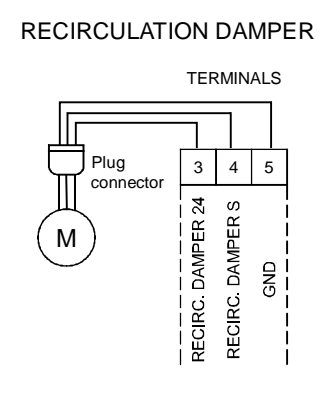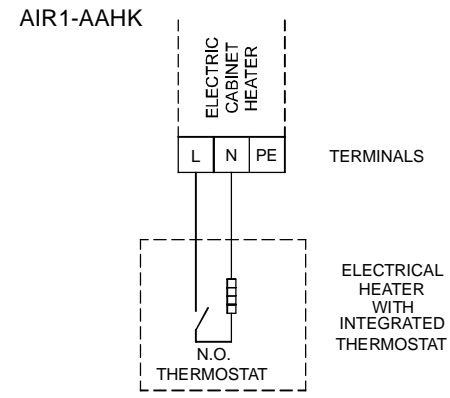

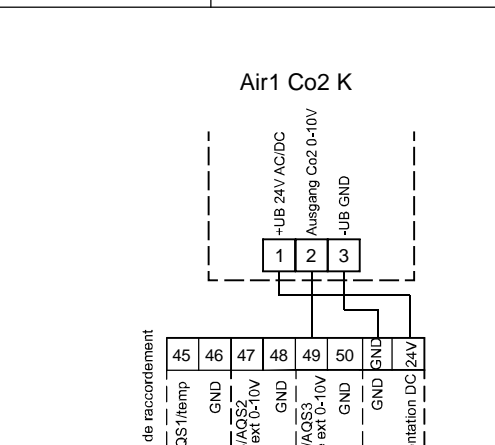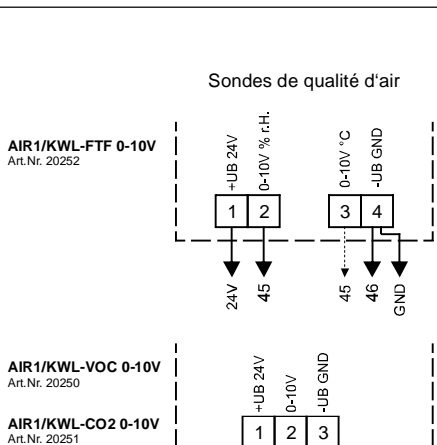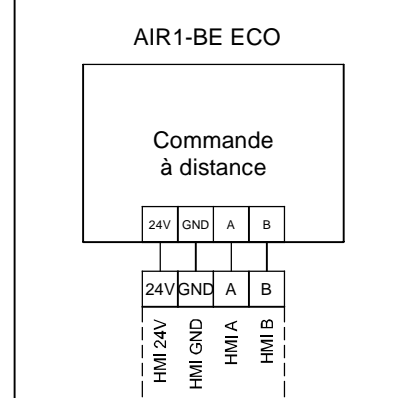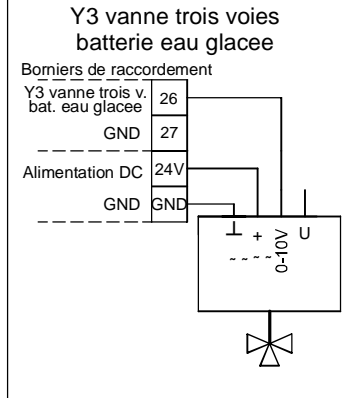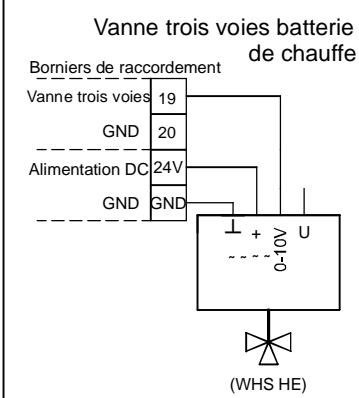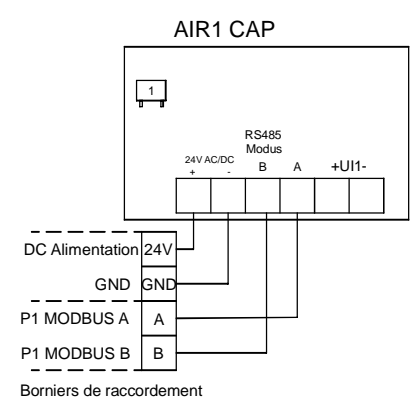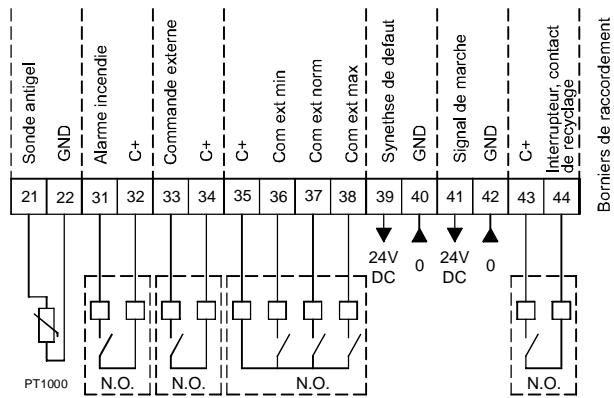

45-46: Sonde de qualité d'air 1 ou capteur de température (sortie de température AIR1/KWL-FTF 0-10V)  
 47-48: Sonde de qualité d'air 2  
 49-50: Sonde de qualité d'air 3

