


B RS 6+1

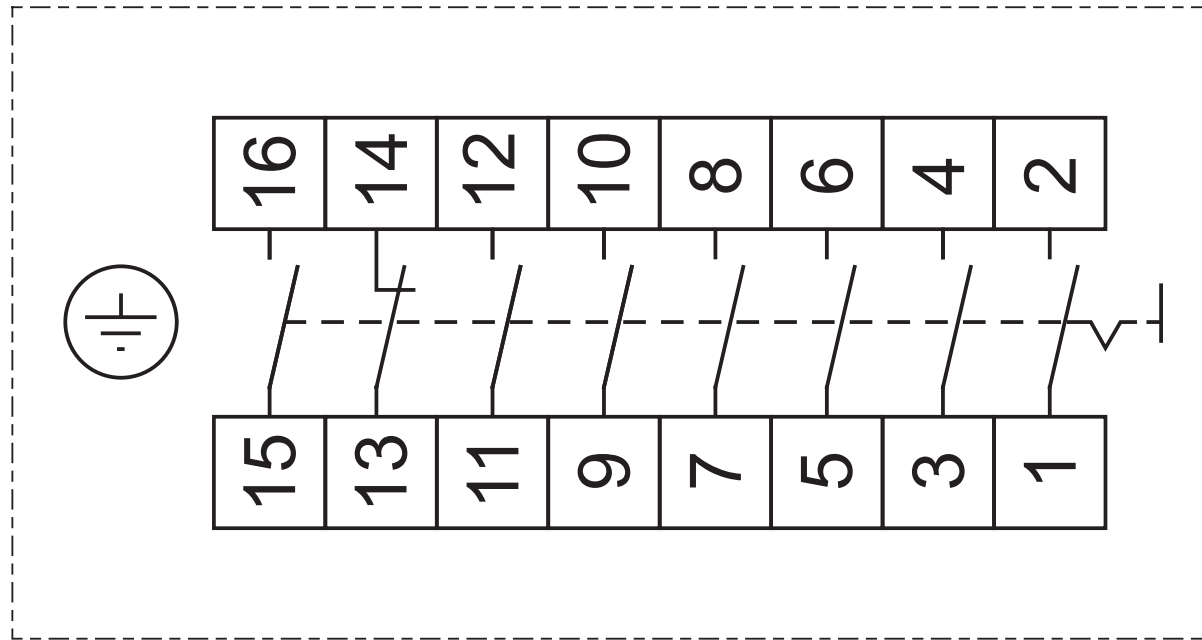

Hilfskontakte
Auxiliary contacts
Contacts auxiliaires

Hauptkontakte
Main contacts
Contacts principaux