


EC 60/15 F SS-1466

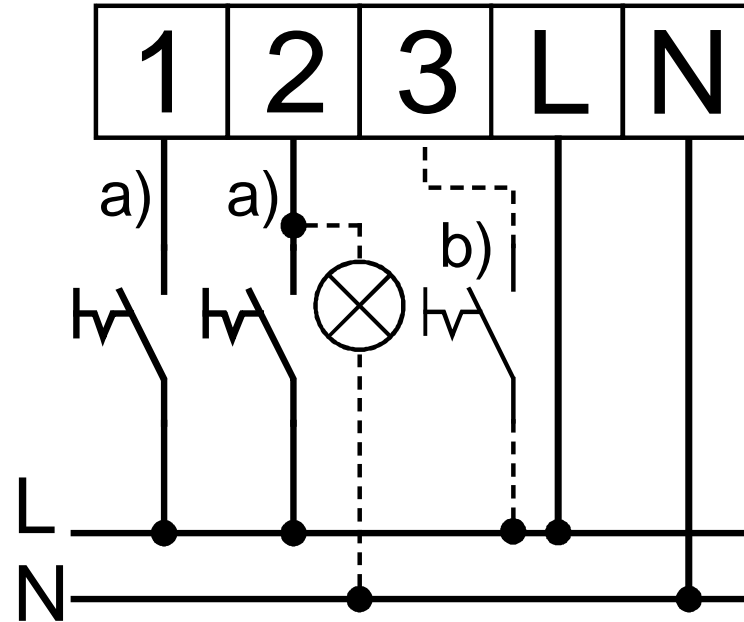

3	
2	60 m ³ /h
1	15 m ³ /h

a) manuell Ein
b) Automatik deaktivieren

a) ON manually
b) deactivate automatic

a) Mode manuel forcé
b) Désactivation du
mode automatique