 



BLH

Art.Nr. 04983



Einstellung der Warntöne
über DIP-Schalter SWA.
Auswahl siehe MBV der BLH

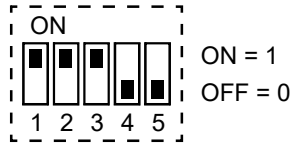


Beispiel: Ton 29
„German Fire“ (DIN 33404)

DIP Schalter SWA DIP Schalter SWB



Lautstärke

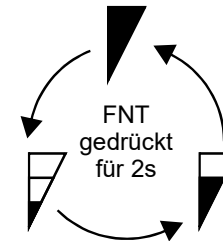

SW GND 1 2 3

GND

LIGHT


SOUND

+ 12-24 V DC

+ 12-24 V DC

BLH

Art.Nr. 04983


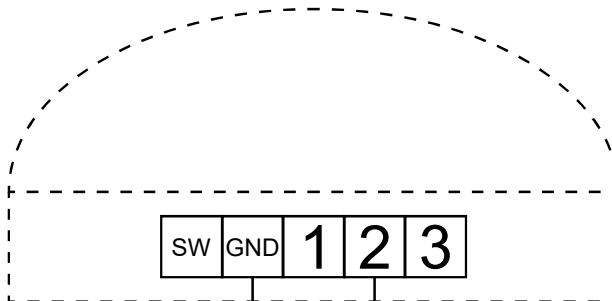


GND

+ 12-24 V DC

BLH

 Art.Nr. 04983

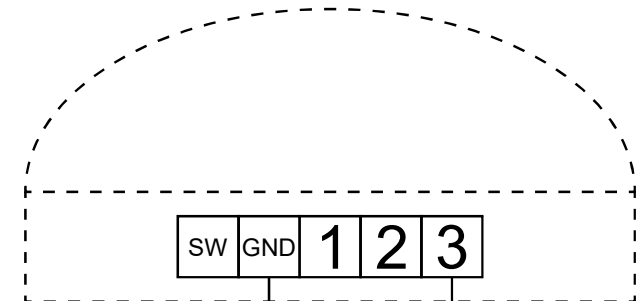

GND

+ 12-24 V DC

S.1 S.2 S.3
D E F


BLH

Item No. 04983

Setting the warning tones via DIP switch SWA.
Selection see installation and operating instruction of BLH




Example: Sound 29:
„German Fire“ (DIN 33404)

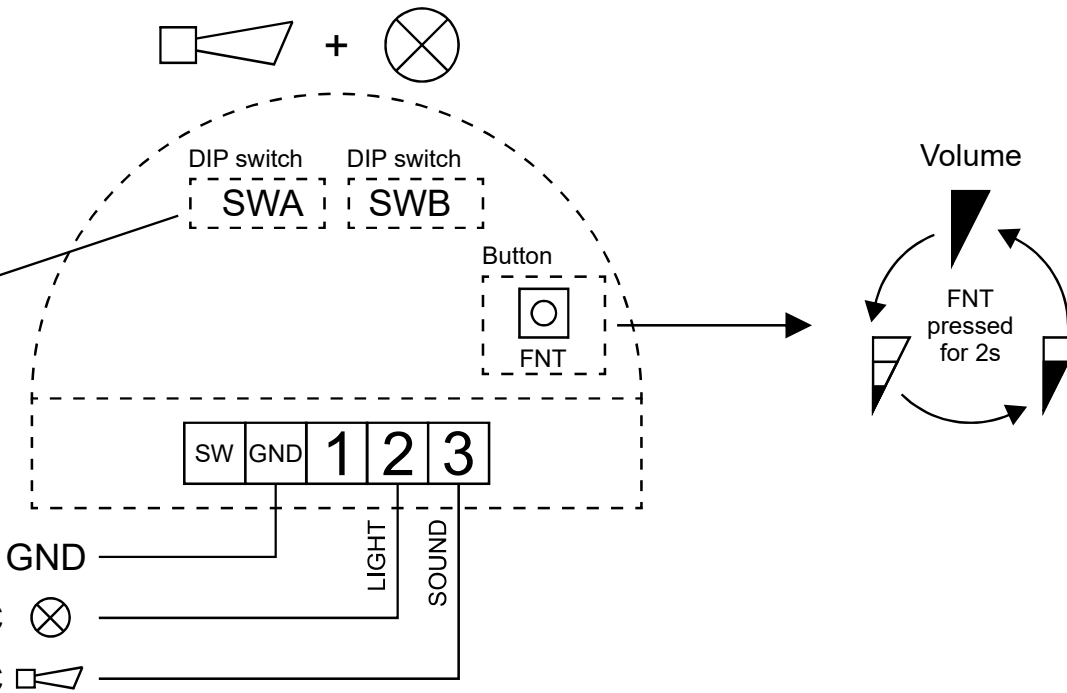


BLH

Item No. 04983

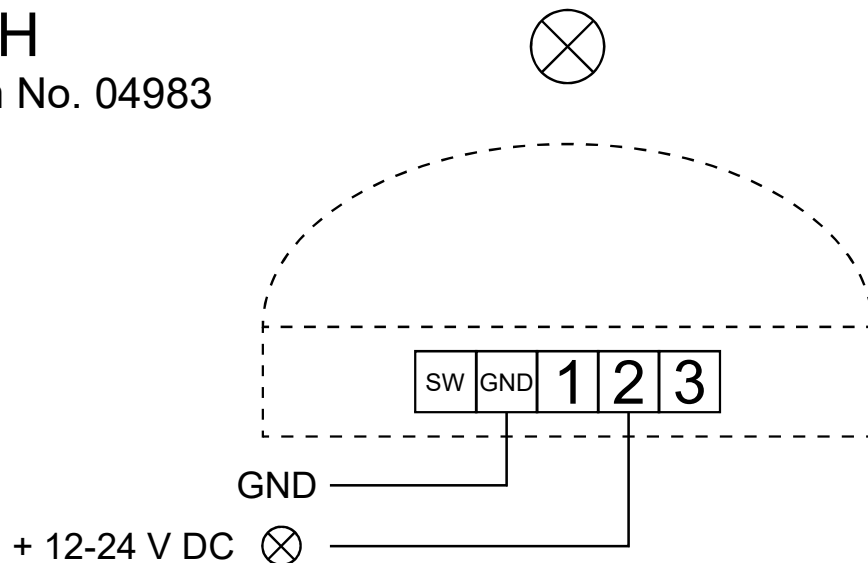

BLH

Item No. 04983

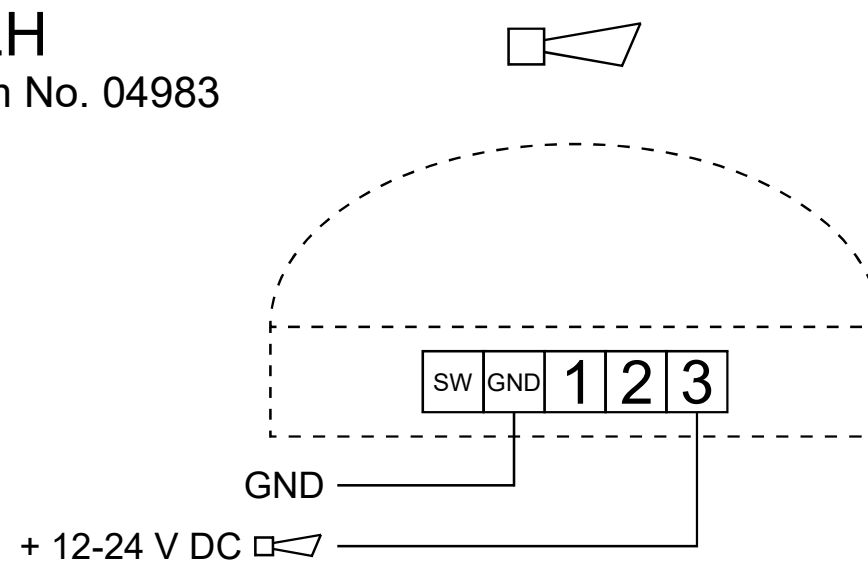

BLH

article no 04983

Réglage des tonalités d'avertissement via les commutateurs DIP SWA. Sélection voir notice de montage et d'utilisation de BLH



 
Exemple: son 29:
„German Fire“ (DIN 33404)

+ 12-24 V DC ⊗
+ 12-24 V DC □

GND

LIGHT

SOUND



Interrupteur DIP

SWA

Interrupteur DIP


SWB

Bouton




FNT

Volume

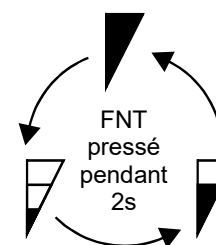

BLH

article no 04983


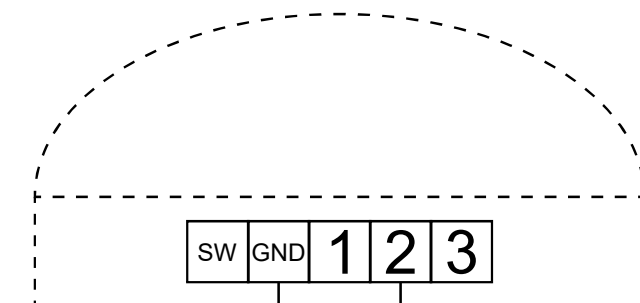


GND

+ 12-24 V DC ⊗

BLH

 article no 04983

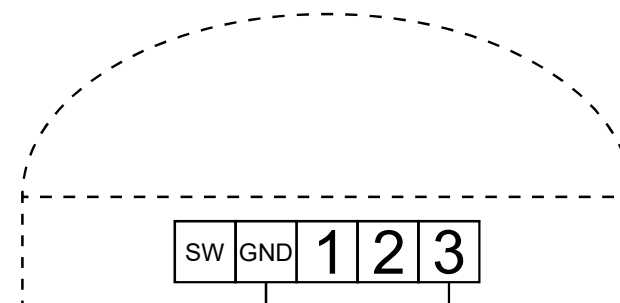

GND

+ 12-24 V DC □