


EC 60/100 F SS-1390

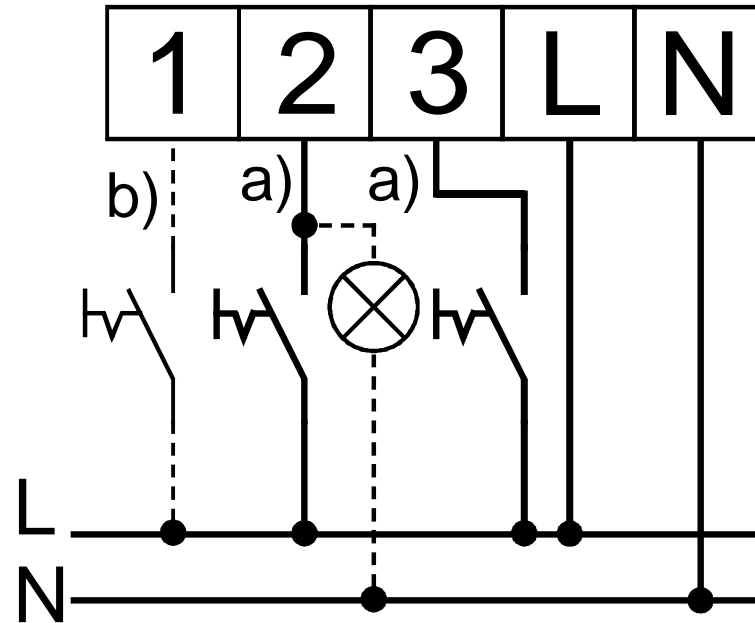

3	100 m ³ /h	
2	60 m ³ /h	
1		

a) manuell Ein
b) Automatik deaktivieren

a) ON manually
b) deactivate automatic

a) Mode manuel forcé
b) Désactivation du
mode automatique